LED Keypad

User Guide

Stav **Disarm** Away Perimeter sensors All sensors disarmed All sensors armed armed, interior sensors disarmed **Night Mode Light Bar** -· Color reflects arming Perimeter sensors state: armed, select interior sensors armed **(3)** - Green = Disarmed Hold to turn off - Light Blue = Armed LED lights - Red = Away - Dark Blue = Night Mode Amber corners indicate Silent Arm trouble condition Removes arming Pulses if zones are open beeps in any arming state Counts down time to exit before arming Hold and use numeric keypad to adjust volume **Numeric Keypad** Enter 4-10 digit user Instant Arm code when required RE663 LED KEYPAD Removes entry delay · Use with Silent Arm Hold and use to adjust volume **Panic** numeric keypad to

Hold both buttons

trigger panic

for three seconds to



Use with Instant

Arm to adjust

brightness



adjust brightness