

4 Controlling Modes in Vera

Now you can use your RDIF Wall Scene Controller to change the current mode in your Vera UI7. Press "Home" button on RFID controller. When LED indicator is solid on, do either:

- Enter valid PIN code followed by button "Enter" on RFID controller, or
- Take (added) RFID Tag close to your RFID Keypad area, RFID Controller will make Di sound and Vera changes Mode to "Home".

My Modes >




Similarly by pressing "AWAY" button on RFID controller and entering valid PIN code followed by button "Enter" or bringing your added RFID Tag close to RFID keypad area you can set the current Vera Mode to "Away".

My Modes >



5) Setting up Notifications

In the Device menu click on settings link in the RFID controller, then click on Notifications option at the bottom menu and follow the wizard.

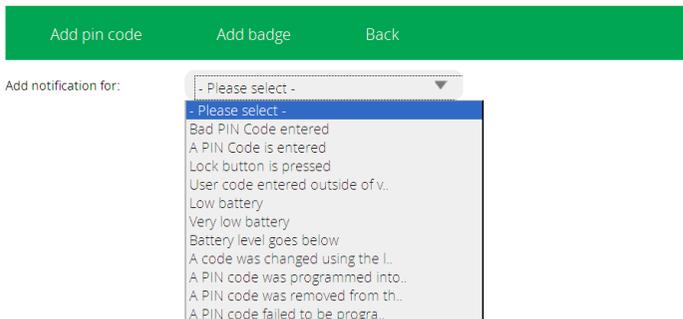

You can choose one of many possible triggers to send a notification. Who and how should receive notifications is defined in "Users and Account Info" section of Vera UI7 interface.

Package Contents

- 1) DHS RFID Wall Scene Controller
- 2) RFID Tag (1 pcs)
- 3) Two wall screws and 3M tape
- 3) Product Manual and Installation Guide
- 4) Integration with Vera Z-Wave Home Controllers Manual

DHS RFID Wall Scene Controller is Z-Wave enabled device for Home Automation system which can:

- arm/disarm a security system or control predefined scenes and modes
- can read Mini RFID tags to arm/disarm
- has keypad for manual code entry to arm/disarm
- have sound and light indication features

Technical Specifications:

Item	Description
RF Protocol	Z-Wave , ISO15693, ISO18000-3, Tag-it™, RFID
Z-wave device type	BASIC_TYPE_ROUTING_SLAVE GENERIC_TYPE_ENTRY_CONTROL
Operating Voltage	2 x AA 1.5V batteries (from 2.3 to 4V DC)
RF Frequency	921.42Mhz AUS/NZ
Operating humidity:	30% to 80%
Operation Range	Up to 30m when no obstacles
Application	Indoor use only
Operation Temperature	10 ° C to 40 ° C
Storage Temperature	-5°C to 80 °C
Weight	45g (excluding batteries)
Housing	ABS

Specifications are subject to change without further notice

The information in this document is subject to change without notice. Digital Home Systems Pty Ltd (DHS) does not make any representations or warranties (implied or otherwise) regarding the accuracy and workmanship of this document and shall in no event be liable for any loss of profit or any damage, including but not limited to special, incidental, consequential, or other damage.

TRADEMARKS

Z-Wave and Z-Wave Plus are registered trademarks of Sigma Designs and its subsidiaries in the United States and other countries. Other trademarks and registered trademarks are the property of their respective owners or companies.

DHS One (1) Year Limited Warranty

Digital Home Systems Pty Ltd warrants this DHS branded hardware product against defects in materials and workmanship under normal use for period of one (1) year from the date of retail purchase by the original end user purchaser ('Warranty Period').

Terms and conditions

To see complete terms and conditions browse to

http://www.digitalhomesystems.com.au/documentation/DHS_Terms_and_conditions.pdf

Online manuals

http://www.digitalhomesystems.com.au/documentation/DHS_RDIF_Product_Manual_v1.pdf

http://www.digitalhomesystems.com.au/documentation/DHS_RDIF_Integration_Manual_v1.pdf

http://www.digitalhomesystems.com.au/documentation/DHS_RDIF_Tech_Specification_v1.pdf



Integration Manual with Vera 3 / Lite UI7



DHS RFID Wall Scene Controller

CATALOGUE NO: DHS-CON-RFID-DHS




1 Adding RFID into Vera

Start ADD Device wizard in Vera interface.



Select Keypad (Wintop RFID Controller) under Hand Held list,

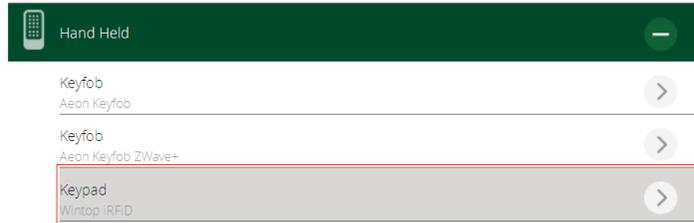

Then follow the wizard as shown on the following screenshots.



This keypad is generally placed near the entrance to your home to conveniently put this system in 'Home' or 'Away' mode, without using the web dashboard or mobile apps. You can also create pin codes which run your own custom scenarios.

First you will need to add this device to your system by pairing it with your Vera. Click 'next' to get started.



Step 1: Select Your Device

Step 2: Pair Your Device



Step 3: Name Your Device

The device was added.

From the device menu, choose the edit button to program pin codes into the keypad and specify which pin codes can put the system in home or away mode, and what custom scenarios you would like to run when pin codes are entered.

Now you can name the device and indicate what room you will put it in.


*Name:

*Room:

*Required. You must name the device. The name must have at least 2 characters and 20 characters maximum. The room name maximum length is 30 characters.

2 Setting up PIN codes

In the "Devices" screen click on settings link for the RFID controller.

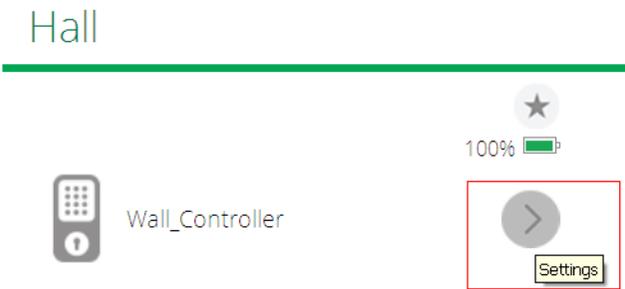


Then click on "Add pin code" option at the top menu and follow the wizard.

PIN name:
•make sure that the name is not already in use.
•maximum 30 characters

PIN code
It must be composed by:
•a combination of four digits 1, 2, 3 or 4;
•must not be a code already used.
Example of valid PIN codes: 2314, 1123, 4442 ...

Set PIN name and PIN code (4 digit from 1 to 4), the click button Save.

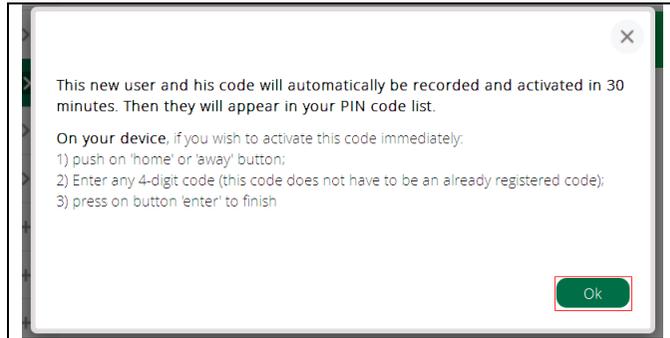

Follow the instructions and check if new PIN code has been created in PIN Codes section of the RFID controller's configuration screen in Vera.

3 Adding RFID Tag


In the Device menu click on settings link in the RFID controller, then click on Add badge option at the top menu and follow the wizard.

1) Take your RFID tag and keep it.

2) Name it to be able to identify it more easily later.

- Make sure that this name is not already used.
- 30 characters maximum.

3) Click 'continue' to associate this rfid tag with your controller.

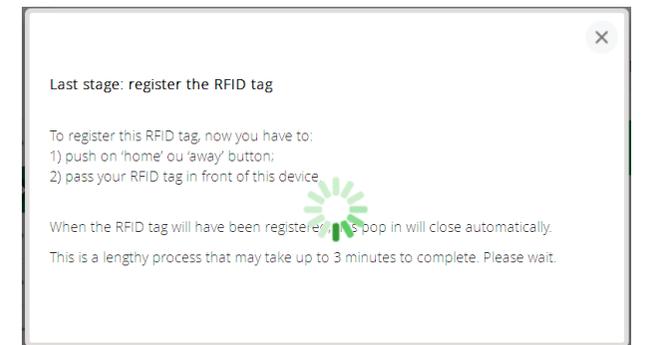

Follow the on-screen instructions and check if new badge / tag has been added in PIN Codes section of the RFID controller configuration screen in Vera UI7.